

# ESSENCE FAN OPERATION

**CAUTION:** The fan will automatically restart at the last operating speed when power is restored.

*Note: The fan may take 30–60 seconds to start rotating after it is turned on. It is normal to see “cogging” (abrupt direction changes) as the fan positions itself relative to the motor stator.*


## Wired Wall Controller

**To start the fan,** turn the control knob clockwise.

**To stop the fan,** turn the control knob counterclockwise.

**To increase fan speed,** turn the control knob clockwise. **To decrease fan speed,** turn the control knob counterclockwise.

*Note: When the fan is turned on, the LED indicator at the top of the controller is lit. The LED will flash an error code if there is a problem with the fan.*

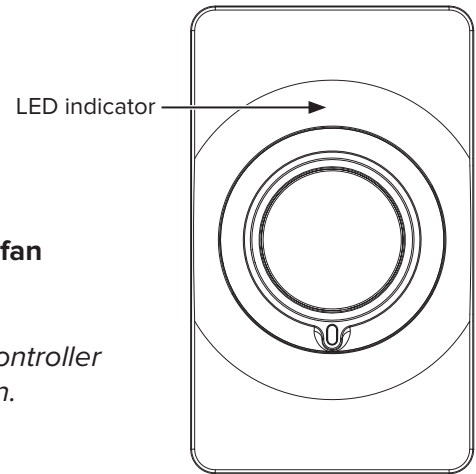

## Wireless Wall Controller

Ensure the power cutoff tab is flush with the wall controller face. If it is not, use a pen or similar object to push it into position.

**To start the fan,** press the power button at the bottom of the controller.

**To stop the fan,** press the power button.

**To increase fan speed,** press the plus (+) button. **To decrease fan speed,** press the minus (-) button.

*Note: The power button flashes when the wireless wall controller is having trouble communicating with the fan(s).*

