

LIGHT BAR BATTERY INSTRUCTIONS

Consult the complete Light Bar Installation Guide for all other aspects of Light Bar instruction and safety guidelines.

- ⚠ CAUTION: Risk of fire and burns. Do not open, crush, or heat above 140°F (60°C).**
- ⚠ CAUTION: Do not use or store the battery near sources of heat such as a fire or heater.**
- ⚠ CAUTION: Do not use any chargers other than those recommended.**
- ⚠ CAUTION: Do not directly connect the battery to wall outlets or car cigarette-lighter sockets.**
- ⚠ CAUTION: Do not incinerate the battery under any circumstances. Dispose of used batteries in accordance with local hazardous material regulations.**
- ⚠ CAUTION: Dispose of battery packs in compliance with local regulations. Do not dispose as household waste.**
- ⚠ CAUTION: Replace battery with BAF 006679 only.**


Technical Specifications

Nominal Voltage	Average 14.4 VDC
Charging Voltage	16.4 VDC
Capacity	4,400 mAh
Standard Charge	2,200 mA at 32° to 113°F (0° to 45°C)
Discharge End Voltage	12 VDC

Check charge level

Your replacement battery arrives partially charged. Check the charge level by pressing the Test button.


Indicators	Charge
Four solid	75–100%
Three solid	50–74%
Two solid	25–49%
One solid	10–24%
One flashing	<10%

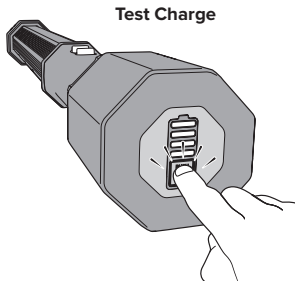

Charge the battery

To charge the battery, plug the charging station into AC power. Insert the battery into the charging station so that it is tightly seated. The indicator LEDs will flash to indicate the battery is charging.

If the indicators do not flash, remove and test the battery. If all four LEDs light up, the battery is fully charged. If three or fewer LEDs light up, make **make sure the battery is tightly seated and the charging station is connected to AC power using the included power supply**. If the LEDs still do not flash, contact Customer Service.

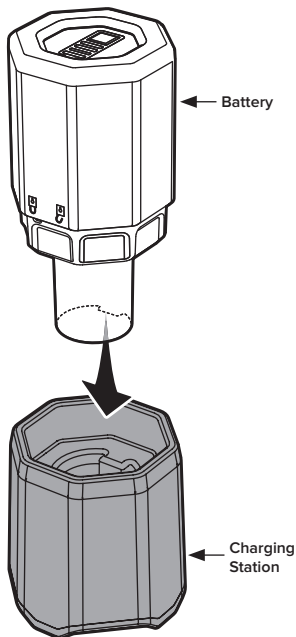


Indicators	Charge
One flashing	0–24%
One solid, one flashing	25–49%
Two solid, one flashing	50–74%
Three solid, one flashing	75–99%
Four solid*	100%

*If battery is fully charged, LEDs will illuminate only when test button is pressed.

Install the battery

To **install the battery**, insert the battery into the base of the Light Bar, and then rotate the locking ring until the indicator mark is above the “locked” icon. Test operation by pressing the + button.

To **remove the battery**, rotate the locking ring to the “unlocked” icon, and pull out the battery.

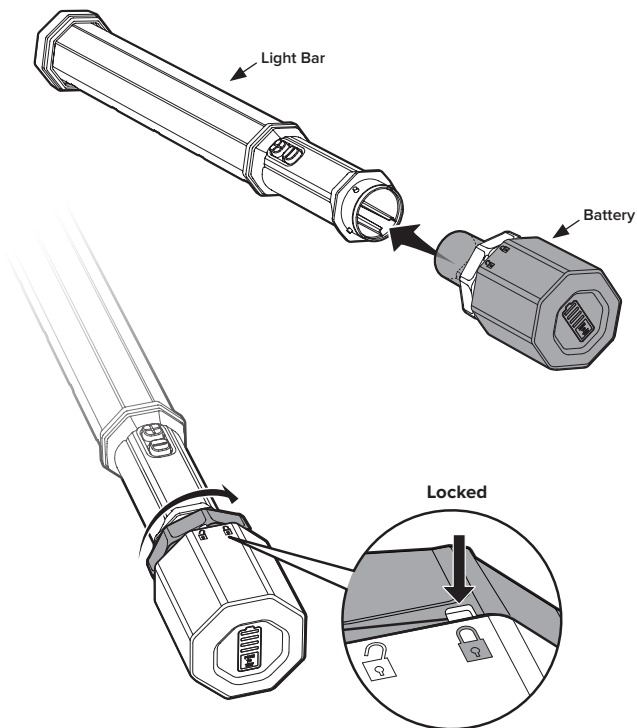

QUESTIONS?

Customers in the United States

For questions about your product, contact a customer service representative at 877-244-3267 or visit www.bigassfans.com/support

Customers outside the United States

For questions about your product or customer service inquiries, please contact your local Big Ass Fans representative or visit www.bigassfans.com/support

Improper installation, delivery, or maintenance, including, but not limited to, any of the following actions by the customer or agent of the customer will constitute a breach of and will void all warranties:

- Failure to follow the required installation procedures specified in this Installation Guide and in all other documentation
- Failure to follow all relevant codes and ordinances, including, but not limited to, the National Electrical Code (United States), applicable national and local electrical codes, and state and local building codes

www.bigassfans.com/patents • www.bigassfans.com/product-warranties



BAL-INST-158-MUL-01

REV. B

10/18/2018



BIG ASS FANS

1 (877) BIG-FANS | WWW.BIGASSFANS.COM